

## 56.Rear Wiring Harness

### A: LOCATION

#### 1. SEDAN MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R1	16	★	C-3	B97	Bulkhead wiring harness (LHD)
	20	★	B-2		Bulkhead wiring harness (RHD)
R2	16	★	B-2	B98	Bulkhead wiring harness (LHD)
	8	★	C-3		Bulkhead wiring harness (RHD)
R4	1	Black	C-3		Parking brake switch
R8	4	★	C-4		Front seat belt switch LHD (Driver's side)
			B-3		Front seat belt switch RHD (Driver's side)
R9	3	★	C-4		Front door switch LH
R10	8	★	C-4	D22	Rear door cord (Passenger's side)
R12	3	★	B-3		Front door switch RH
R13	8	★	B-3	D28	Rear door cord (Driver's side)
R16	3	★	B-4		Rear door switch RH
R25	2	Black	B-4		—
R41	4	★	C-4		Seat heater LH
R43	20	★	C-3		Seat heater switch
R44	4	★	B-3		Seat heater RH
R50	12	★	B-2	B90	Bulkhead wiring harness
R51	2	Black	B-3		Vanity mirror illumination RH
R52	3	★	B-3		Interior light
R54	2	Black	B-3		Vanity mirror illumination LH
R55	10	Gray	B-3		Sunroof control unit
R56	2	★	B-3		Spot map light
R57	3	★	B-3		Rear view mirror
R72	2	Black	B-4		Rear ABS wheel speed sensor RH
R73	2	Black	B-4		Rear ABS wheel speed sensor LH
R98	18	★	B-2	i53	Instrument panel wiring harness
R107	4	★	B-3		Front seat belt switch LHD (Passenger's side)
			C-4		Front seat belt switch RHD (Passenger's side)
R109	2	Black	C-4		Power seat LHD (Driver's side)
			B-3		Power seat RHD (Driver's side)
R128	5	★	B-3		Sunroof switch
R142	2	Black	C-4		Fuel pump condenser
R167	18	★	C-3	i102	Instrument panel wiring harness (LHD)
	16	★			Instrument panel wiring harness (RHD)
R168	20	★	C-3		Fuse & relay box (F/B) (LHD)
	20	★	B-2		Fuse & relay box (F/B) (RHD)
R187	5	★	B-3		Tilt switch
R188	2	Black	B-3		Power seat LHD (Passenger's side)
			C-4		Power seat RHD (Passenger's side)
R192	2	★	B-3		Seat buzzer

★: Non-colored

## Rear Wiring Harness

### WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	20	Yellow	C-3		Airbag control module LH (Model with side airbag, curtain airbag)
	12	Yellow			Airbag control module LH
AB18	20	Yellow	C-2		Airbag control module RH (Model with side airbag, curtain airbag)
	12	Yellow			Airbag control module RH
AB19	2	Yellow	C-4	AB20	Inflator (Side) LH
AB21	2	Yellow	C-4		Pretensioner LH
AB23	4	Yellow	C-4		Side airbag sensor LH
AB24	2	Yellow	B-3	AB25	Inflator (Side) RH
AB26	2	Yellow	B-3		Pretensioner RH
AB28	4	Yellow	B-3		Side airbag sensor RH
AB34	4	Yellow	B-3		Curtain airbag sensor RH
★: Non-colored					

## WIRING SYSTEM

